



1080P FULL-HD Dash Camera

With 2.4" Screen, GPS Logger, WIFI & FHD Rear Camera



* Includes
1080P Rear Camera

KPT-1024
USER MANUAL



CONTENTS

1.0	INTRODUCTION	4
2.0	CAUTION	5
2.1	Battery Warning.....	6
2.2	Product Information.....	7
2.3	Package Contents.....	7
2.4	Product Overview.....	8
3.0	BUTTON FUNCTIONS AND INDICATORS	9
4.0	GETTING STARTED	10
4.1	Inserting a Micro SD Card.....	10
4.2	Removing a Micro SD Card	11
4.3	Installing the KPT-1024.....	11
4.4	Installing the Rear Camera	12
4.4.1	Installation Guide.....	12
4.4.2	Rear Camera Wiring Diagram	14
4.4.3	Rear Camera Features	15
5.0	CONNECTING TO POWER	15
6.0	LED INDICATOR	16
7.0	POWERING THE KPT-1024 ON/OFF	16
7.1	Auto Power ON/OFF	16
7.2	Manual Power ON	16
7.3	Manual Power OFF	16
7.4	Re-setting the KPT-1024	17
8.0	INITIAL SETTINGS	17
8.1	Formatting the Inserted Micro SD Card.....	17
8.2	Setting the time and Date	18

9.0	REAL-TIME ROAD ALERTS	18
9.1	Speed Camera Alert	18
9.2	Blackspot Alert	18
9.3	School Zone Alert	19
9.4	Railway Crossing Alert	19
10.0	INTERFACE	20
10.1	Video Mode	20
11.0	PLAYBACK VIDEO.....	21
11.1	Setup Menu	21
12.0	SOFTWARE PLAYBACK	25
13.0	DOWNLOADING THE KPT-KONNECT APP AND CONNECTING TO YOUR KPT-1024	26
14.0	KPT-KONNECT APP OPERATION	27
14.1	App Video Playback and Downloading Videos	28
14.2	KPT-1024 App Settings	29
15.0	WARRANTY TERMS & CONDITIONS	30
15.1	Indemnity	31
15.2	Warranty and Warranty Disclaimer.....	31
16.0	NOTES	34

1.0 INTRODUCTION

Thank you for purchasing a Kapture Dash Camera. Please read these instructions before attempting to install or use this product.

Before attempting to use or install your Kapture KPT-1024, please ensure you have read and understood all of the safety notes below.

SAFETY NOTES:

- Do not expose your KPT-1024 to liquids, excessive dusty conditions or temperatures exceeding 60°C.
- Only use the included cables to power and charge the KPT-1024.
- Please do not attempt to adjust the KPT-1024 position or Settings whilst you are driving your vehicle.
- Please clean the windshield thoroughly removing all dust and dirt particles before fixing the adhesive mount.
- Ensure you are using your KPT-1024 within your countries' road laws. Please make sure you are familiar with your local road legislation before use.

2.0 CAUTION

- Ensure you are using your Dash Camera within your countries' road laws. Please make sure you are familiar with your local road legislation before use.
- Please set the time and date before you use this device.
- The notifications given by the Dash Camera are suggestions only, please drive according to the actual conditions of the road.
- The results of the GPS positioning are for reference only. The Dash Camera will lose GPS positioning abilities when the signal is blocked (e.g. driving through tunnels, enclosed car parks).
- GPS positioning accuracy may vary depending on weather and surroundings such as dense cities, tunnels, or forests. GPS satellite signals cannot pass through most solid materials. Tinted windows may also affect the GPS signal.
- The values displayed in this system, such as speed, position, and the distance warning, may be affected by the surrounding environment.
- This system is to be used only for non-commercial use, within the limits permitted by the relevant laws.
- Avoid using the Dash Camera near any devices that emit radio interference (e.g. microwave ovens).
- It is considered normal operation for the Dash Camera to become warm during use.

2.1 BATTERY WARNING

- Always charge the Dash Camera using the provided charger. Improper charging of the Dash Camera may result in failure of the internal battery.
- Never dismantle the Dash Camera or expose the internal battery.
- Do not dispose of the Dash Camera in a fire.
- Dispose of the Dash Camera observing local regulations, while being mindful of the internal battery.
- Do not attempt to replace or expose the internal battery.

NOTES ON INSTALLATION

- For optimal operation, it is advised that the Dash Camera is installed near the rearview mirror, at the top centre of the windshield.
- Make sure that the lens is within the range of the windscreen wiper to ensure a clear view when it rains.
- Do not touch the lens with your fingers. Finger prints left on the lens will result in unclear videos or photos. If photos or videos are blurred, please clean the lens gently with a microfibre cloth.
- Do not install the device on a tinted window. Doing so may damage the tint film and restrict the Dash Camera's GPS signal.
- Make sure that the installation position does not hinder or block the driver's field of view or GPS signal.
- Only use the included cable to power the Dash Camera.
- The KPT-1024 is designed to be constantly connected to the included power supply, and is NOT designed to be used solely with the camera's built in battery, which has been added as a backup power supply only.

2.2 PRODUCT INFORMATION

For the latest manual and product updates please visit our website at www.kapturecam.com.au or www.kapturecam.co.nz.

2.3 PACKAGE CONTENTS



KPT-1024
Dash Camera



Dash Camera
3M Mount



Spare 3M
Adhesive Plate



12/24v Car
Charger



1080P FHD
Rear Camera

 


User
Guide



Electrostatic
Film x 2

2.4 PRODUCT OVERVIEW

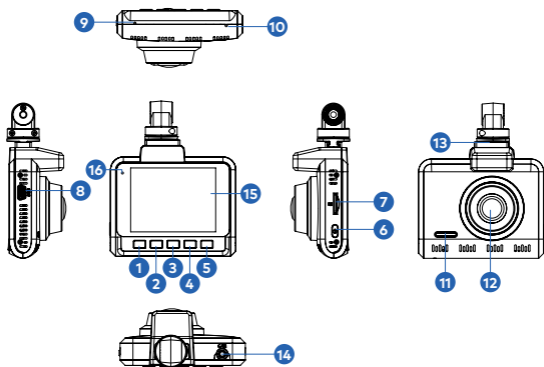



- | | |
|--|-----------------------------|
| 1. Menu/Mode Button | 9. Reset |
| 2. Up Button | 10. Microphone |
| 3. Lock Recording Button + WiFi ON/OFF | 11. Speaker |
| 4. Down Button | 12. Lens |
| 5. Recording/OK Button | 13. Slot for Mount |
| 6. ON/OFF Power Button | 14. Cam/Rear Camera |
| 7. Micro SD Card Slot | 15. LCD Screen |
| 8. Mini USB Power Socket | 16. Recording Indicator LED |

3.0 BUTTON FUNCTIONS AND INDICATORS

To access the menu you need to press the 'OK' button to stop recording.

Symbol	Key	Instruction
M	Menu / Mode Button	Press to enter the General Settings Menu. Press and hold to enter Playback mode.
△	Up Button	In the Settings menu use the Up Button to toggle between the Settings.
⏏	Lock Recording Button	When the Dash Camera is recording, press the Lock Button to lock the current file. A locked file won't be over recorded during loop recording. Also turns on/off WIFI.
▽	Down Button	In the Settings menu use the down key to toggle between the Settings.
OK	Rec / OK Button	Press the OK Button to Start/Stop Video recording in Video mode. Press the OK Button to take photos in Camera mode. Press the OK Button to play/pause the current video in playback mode.
⏻	On / Off Power Button	Press and hold the Power Button to Power Off the device. Press once to switch the LCD Screen Off (however, please note that the Dash Camera will continue recording).

BUTTON FUNCTIONS AND INDICATORS CONT'

Symbol	Key	Instruction
	Micro SD Card Slot	Micro SD Card slot. Please use a capacity of 32 to 128 GB, Class 10 and above SD Card.
	Mini USB Power Socket	Mini USB Power socket to connect with the power adaptor cable provided in the packaging.
Mic	Microphone	Microphone position.
Reset	Reset	Press to reset to factory Settings.
11	Speaker	Speaker vent.
12	Lens	Camera lens.
13	Slot for Windscreen Mount	Slot to insert your 3M Windscreen Mount supplied in the box.
14	Rear Camera In	For plugging in your rear camera.
15	LCD Screen	LCD Display Screen
16	Recording Indicator LED	Indicator to show the Dash Camera is recording

4.0 GETTING STARTED

4.1 INSERTING A MICRO SD CARD

With the Dash Camera turned off, and the screen facing towards you, insert your Micro SD Card (not included) in the slot on the left side of the KPT-1024. The text on the Micro SD Card should be facing towards you. Push the Micro SD Card in until a click is heard.

4.2 REMOVING A MICRO SD CARD

Ensure that the KPT-1024 is powered off, and with your thumbnail press in the Micro SD Card until a click is heard. The Micro SD Card will eject from the KPT-1024 when released.

 
PLEASE NOTE:

- Micro SD Card is not included.
- Do not remove or insert the Micro SD Card while the Dash Camera is turned on as this may damage the Micro SD Card or corrupt the Micro SD Card's already stored data.
- Please use a Class 10 or higher rated Micro SD Card with a minimum capacity of 32GB and a maximum capacity of 128GB.
- Please format the Micro SD Card before the initial use.
- When removing the Micro SD Card, be careful as the card may eject quickly.

4.3 INSTALLING THE KPT-1024

1. **OPTIONAL:** Remove the protective layer from the Electrostatic film (provided) and affix it on your windscreen. This helps to easily remove the 3M adhesive from your windscreen without any adhesive residue.
2. Remove the protective stickers from the Dash Camera and the 3M mount.
3. Press the mount base firmly against the windscreen and hold for 30 seconds.

4. Insert the power cable adaptor into the Dash Camera power socket. Then insert the rear camera in the CAM port on the Dash Camera.

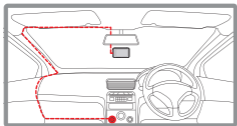**NOTE:**

- It's recommended that the KPT-1024 is installed in the centre of the windscreen behind the rearview mirror.

4.4 INSTALLING THE REAR CAMERA

4.4.1 INSTALLATION GUIDE

1. **OPTIONAL:** Select the electrostatic film from the box and install it on the rear windshield in the recommended position as shown below. Please wipe the glass before installation and push out the bubbles between the static film and the glass before installation.
2. Remove the protective film from the rear camera base bracket and select either the top or the bottom of the rear window to position the rear camera. Press down on the base of the bracket by hand for 30 seconds to ensure that the sticker adhesive has attached to the electrostatic film.
3. Connect the rear camera to the KPT-1024 using the cable provided. Either run the cable through the roof lining or under the carpet underlay as shown below. The rear camera can rotate 360° degrees depending on the position and type of installation method.

Method 1: Thread the rear camera cable along the top of the roof lining and connect it to the KPT-1024 Dash Camera.



Method 2: Lift up the car carpet and run the rear camera cable along the underlay of the carpet and connect it to the KPT-1024 Dash Camera.

4. Adjust the camera by rotating the barrel until it is capturing the entire road.

NOTE:

- While viewing your live footage on the App or on the Dash Camera, the rear camera will show the true rearview image where the license plates of vehicles behind your vehicle are inverted. Actual recorded images are horizontally flipped to capture the license plate correctly.

  4.4.2 REAR CAMERA WIRING DIAGRAM

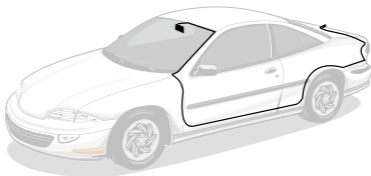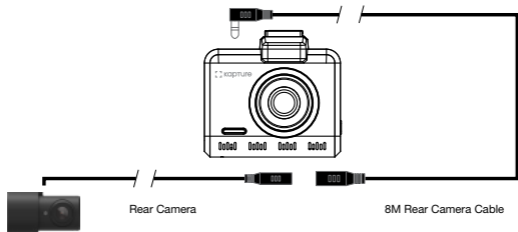

4.4.3 REAR CAMERA FEATURES

After successfully installing and connecting the rear camera into the main Dash Camera, the rear camera will be displayed on the Dash Camera's 2.4" Screen.

Both Cameras will instantaneously start recording after the Dash Camera is powered ON.

Both Front and Rear Camera images will now be displayed on your Dash Camera's 2.4" Screen, you can switch between them by pressing the down key.

The display can switch between:

1. Full Front Camera view
2. Full Rear Camera view
3. Full Front Camera view with small window for Rear Camera
4. Full Rear Camera view with small window for Front Camera

5.0 CONNECTING TO POWER

Only use the included charger to power and charge the Dash Camera.

Once the Dash Camera is securely installed on your vehicle's windscreen, run the power cable along your vehicle's console and windscreen and plug the Mini USB end into the Dash Camera and the power adaptor plug end into your vehicle's cigarette lighter port.

NOTES:

- It is recommended that the Dash Camera is installed behind your vehicle's rearview mirror.
- Make sure that the camera view is not obstructed by any window tint or any other objects.
- The KPT-1024 is designed to be constantly powered by the included DC power plug. The internal battery is designed to hold saved Settings and power the camera when in Parkmode. The battery is NOT designed for primary use.

6.0 LED INDICATOR

- A flashing blue LED shows camera's internal battery is being charged and the camera is recording.
- A continuous blue LED shows it is charging but not recording.

7.0 POWERING THE KPT-1024 ON/OFF

7.1 AUTO POWER ON/OFF

When the Dash Camera is correctly installed and connected to your vehicle's 12/24V power supply, the Dash Camera will automatically power up and start recording when the vehicle accessories are activated.

7.2 MANUAL POWER ON

Hold the Power Button on the lower right-hand side of the camera until the Kapture start-up screen appears.

7.3 MANUAL POWER OFF

Press the Power Button on the lower right hand side of the Dash Camera. After powering down the device, please wait for 10 seconds before turning the Dash Camera back on.

7.4 RESETTING THE KPT-1024

If the Dash Camera does not function normally, try restarting the Dash Camera. To restart the Dash Camera, using a small pin, press and hold the Reset Button on the bottom side of the camera.

8.0 INITIAL SETTINGS

Before using the Dash Camera we recommend formatting the inserted Micro SD Card and Setting the correct Time and Date.

8.1 FORMATTING THE INSERTED MICRO SD CARD

Formatting the Micro SD Card will delete all information on the inserted Micro SD Card and prepare the card for use with the Dash Camera.

1. Press the Menu Button to enter the Settings/Setup Menu.
2. Use the Up and Down keys to navigate the Settings menu and highlight the Format SD Card Setting, and press the OK Button to select.
3. Press Up and Down Keys to select confirm.
4. Press the OK Button to start formatting.

Quick Format (default), you can switch 'quick formatting' to change to full formatting in the Setting Menu.

NOTES:

- Menus cannot be accessed while the camera is recording. Please stop the recording before attempting to access the menu.
- Formatting your Micro SD Card will delete all files from the card. Once these files have been deleted, you will not be able to recover them.

8.2 SETTING THE TIME AND DATE

Setting the Time and Date allows you to stamp your footage with this information as a reference. This information is particularly critical when you want to use your footage in insurance claims.

1. Press the Menu Button to enter the Settings/Setup Menu.
2. Press the UP and Down Key to select Date/Time.
3. Press the OK Key to enter into the Date/Time Setting.
4. Press the Up/Down key to change the date and time and press OK to move to the next digit.
5. Press OK to confirm the Setting and return to the previous menu.

9.0 REAL-TIME ROAD ALERTS

Your Dash Camera comes with the added feature of providing real-time road safety alerts. The alerts will be displayed on the LCD Screen showing your actual live speed, speed limit (if applicable), and distance to the alert.

These alerts can be individually disabled from the Settings menu.

9.1 SPEED CAMERA ALERT

This will alert you of speed and red light cameras at your designated distance. The alert will show the speed limit with you current speed and a count down of the distance to the speed camera.

9.2 BLACKSPOT ALERT

Blackspot alerts you before you enter a high accident zone.

9.3 SCHOOL ZONE ALERT

School Zone alerts will notify you before you enter a school zone.

9.4 RAILWAY CROSSING ALERT

Railway Crossing alerts will notify you of an upcoming rail crossing.

NOTE:

- You can adjust the Settings so you can choose how far your car needs to be from an alert to receive a notification from the Settings menu. For example, you can set your distance to be notified from 100M, 200M, 300M, 400M and 500M.

Note: Here Maps does not support School Zone & Accident Blackspot Alerts for New Zealand.

10.0 INTERFACE

10.1 VIDEO MODE



1. **Video Mode:** Number 3 shows the loop recording duration.
2. **Duration:** 00:00:01 Loop Recording timer.
3. **GPS:** GPS Signal Indicator.
4. **G-Sensor:** The highlighted bar indicates the sensitivity of the G-Sensor with 1 bar indicating low sensitivity.
5. **Parkmode:** The highlighted bar indicates the sensitivity of Parkmode with 1 bar indicating low sensitivity.
6. **WiFi:** Displays WiFi connectivity
7. **Microphone:** Turns on or off the microphone.
8. **Micro SD Card:** Indicates inserted Micro SD Card.
9. **Battery:** Indicates battery level.
10. **Speed:** Displays current speed.
11. **Date:** (01/01/2019)
12. **Time:** (00:00:01)

11.0 PLAYBACK VIDEO

1. If the Dash Camera is recording, press the OK key first to stop recording.
2. Long press **M** Menu key to switch to playback mode.
3. Short press **▲** or **▼** key to page up or down to select files.
4. Short press the 'OK' key to play selected video files. Short press it again to pause.
5. Press **M** Menu key to delete a file.
6. Long press Menu key to exit out of playback mode.

11.1 SETUP MENU

1. Press **OK** to stop recording.
2. Press the **M** Menu Button to enter the Settings Menu.
3. Press the **▲** and **▼** Button to select the Setting you wish to change.
4. Press **OK** Button on your selected option.
5. The new Settings will be shown on the top left of the screen and also on the selected Setting icon.

Menu	Select Settings	Description
Resolution	1080P FHD 720P FHD	Higher resolution gives your footage more detail but uses more storage space. Lower resolution saves storage space. Default: 1080P
Loop Recording	Off / 1, 3 or 5 Minutes	Loop Recording defines the length of time the KPT-1024 records, before creating a new file. Using the Off Setting will record the longest possible loops under the file size of 1 GB (around 5 minutes). Default: 3 Mins

SETUP MENU CONT'

Menu	Select Settings	Description
Microphone	Off / On	Turning this Setting off mutes the built in microphone. Default: On
Exposure	0 / 0.3 / 0.7 / 1 / 1.3 / 1.7 / 2 EV	Changes the exposure value of recording footage. Default: 0
G-Sensor	Off / Low / Medium / High	To adjust the sensitivity of the G-sensor. High is the highest sensitivity and Low is the lowest. Default: Low
Parkmode	Off / On	Parkmode helps to make your car safe by recording video even when the Engine is switched off. Your Dash Camera will record incidents whenever it detects an impact and the G-Sensor is triggered. Parkmode will record a maximum of 10 instances during a 24 hour period if the battery has been fully charged. Default: Off
Language	Select Language	Select Menu Language. Default: English
Volume	Off / Low / Medium / High	Controls the volume of inbuilt speaker. Default: Medium
Auto LCD Off	Off / 1 min / 3 mins / 5 mins	Auto Screen Saver Setting determines the amount of time before the display screen turns off. (KPT-1024 will continue to record even when the display is Off). Default : Off

SETUP MENU CONT'

Menu	Select Settings	Description
ADAS	Off / On	ADAS gives a lane departure warning. Default: Off
Display Mode	Front Camera Rear Camera PIP A: Front camera with Rear Camera IN PIP B: Rear Camera with Front Camera IN	Changes the video display mode options for the Dash Camera. Front Camera, Rear Camera, Picture in Picture mode. Default: PIP A
Date/Time	Set Date and Time	Using the Up/Down and OK Buttons to enter the date and time (24hr clock) to stamp onto your footage. Once you have finished, use the OK Button to save and return to the Settings Menu.
Date Format	Off / On	To select the date format. Default: DD MM YYYY
GPS Stamp	Off / On	Stamps a watermark of your GPS coordinates and speed. Default: On
Satellite Status	N/A	Show the GPS satellite signal strength.
Speed Unit	KM/H or MPH	Select a Speed Unit for GPS watermark. Default: KM/H
Key Sound	Off / On	Mutes control for key beeps. Default: On
WIFI Mode	Off / On	Turns on or off the inbuilt WIFI. Default: Off

SETUP MENU CONT'

Menu	Select Settings	Description
License Plate	Input License Plate Numbers	Input your car license plate and it will be stamped over the recorded footage.
Format SD Card Warning	Off / 15 / 30 / 60 Days	Sets a reminder to format your Micro SD Card in case of excess locked footage files. Default: 30 Days
Storage	N/A	Displays current memory capacity on Micro SD Card.
Format SD Card	Cancel / OK	Format the inserted Micro SD Card, deleting all photos, videos and data.
Default Setting	Cancel / OK	Restore factory Settings
Version	OK	Displays the installed firmware version and WIFI Name and Password.
Distance of Alert	100, 200, 300, 400, 500 metres	Select the notification distance of Speed Alerts. Default: 400
Alert Type	Display or Audio & Display Alert for speed alerts	Select the alert type. Default: Audio & Video
Speed Camera Alert	Off / On	Turns off or on Speed Camera Alerts. Default: On
Red Light Camera Alert	Off / On	Turns off or on Red Light Camera Alerts. Default: On
Black Spot Alert	Off / On	Turns off or on Black Spot Alert. Default: On
School Zone Alert	Off / On	Turns off or on School Zone Alert. Default: On

12.0 SOFTWARE PLAYBACK



Your KPT-1024 with inbuilt GPS will record the GPS coordinates and the speed of your travel.

To play back the GPS or recorded footage on your desktop or laptop, please follow these steps:

- Download software from www.kapturecam.com.au and run it on your PC. (Search our website for KPT-1024).
- To view images, or recorded footage from the Dash Camera on your computer, you will need to remove the Micro SD Card and transfer the files to your computer using a Micro SD Card slot or compatible USB adaptor.
- Once your files have been transferred to your computer, please select the folder and select the file you wish to view or playback in a clearly marked folder.

13.0 DOWNLOADING THE KPT-KONNECT APP AND CONNECTING TO YOUR KPT-1024

The KPT-1024 needs to be used in combination with the KPT-KONNECT App to function correctly.

All major Settings on the KPT-1024 are accessed through the KPT-KONNECT App. The system requirements for your smartphone are noted below.

iPhone: iPhone 5 or later using iOS 8.0 and above.

Samsung Galaxy: S3 and later using Android 4.2.2 and above.

For you to correctly connect your smart device to your KPT-1024 you will need to download the KPT-KONNECT App from the App store. You will also need to connect your smartphone to the KPT-1024's WiFi signal using your smartphone's WiFi Settings.

For Android devices

Please search KPT-KONNECT in the Google Play Store for installation. Alternatively you can scan the QR code found in the system Settings in your Dash Camera. You can also scan the QR code on the following page.

For iOS devices

Please search KPT-KONNECT in the iOS App Store for installation. Alternatively you can scan the QR code found in the system Settings in your Dash Camera. You can also scan the QR code on the following page.

For a step by step guide on connecting to your Dash Camera please follow the steps below.



1. Power on the KPT-1024, turn the WiFi ON (refer to Product Overview - Button 3 on page 7) and allow 2 minutes for the WiFi connection to start.
2. Once the App is downloaded and installed on your smartphone and the Dash Camera is powered ON, open your smartphone's WiFi Settings and connect to the wireless connection named KPT1024_XXXX. (XXXX is the unique number for every Dash Camera).
3. When prompted, enter the password 12345678
WiFi Name: KPT-1024
Password: 12345678
4. Once the connection has been made, open the KPT-KONNECT App on your smartphone. You will now be able to access the live recording screen for stored videos, and Dash Camera Settings.

14.0 KPT-KONNECT APP OPERATION

To use the KPT-KONNECT App, your smart device will need to be connected to the Dash Camera wireless connection.

After following the previous section instructions, downloading the KPT-Konnect App and connecting with your KPT-1024 , please review the below instructions on how to best operate your App.

14.1 APP VIDEO PLAYBACK AND DOWNLOADING VIDEOS

For Video Playback, please follow the instructions below.

1. Open the **KPT-KONNECT App**.




Picture 1



Picture 2



 
Picture 3



Picture 4



 Picture 5



Picture 6

Picture 1: Select KPT-1024 from the drag down menu on the home page of the App when you first open it.

Picture 2: Press the gallery icon and the videos saved on the phone will become available.

Picture 3: To access the recorded files, press 'Connect to Dash Camera'.

Picture 4: Press the record Button and then press the picture icon to access the saved videos on the Micro SD card.

Picture 5: Press the video icon and then press select. After selecting this, press 'Download' to begin downloading the video onto your smartphone. Alternatively, you can press the 'video to playback' Button.

14.2 KPT-1024 APP SETTINGS

Menu	Setting	Description
Resolution	1080P, 720P	Change the recorded video resolution
Exposure	Exposure Settings	Change the exposure on the recorded video
WIFI		Change the Dash Cameras default WIFI name and password
Volume	Off, Low, Mid, High	Controls the sound level of the inbuilt speaker
Format SD Card		Format the Micro SD Card
Parkmode	On, Off	Records 60 seconds of footage if activity is detected while parked Default: Off

15.0 WARRANTY TERMS & CONDITIONS

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. This warranty is provided in addition to your rights under the Australian Consumer Law.

Directed Electronics Australia Pty Ltd (Directed Electronics) warrants that this product is free from defects in material and workmanship for a period of 12 months from the date of purchase or for the period stated on the packaging. This warranty is only valid where you have used the product in accordance with any recommendations or instructions provided by Directed Electronics.

This warranty excludes defects resulting from alterations of the product, accident, misuse, abuse or neglect. In order to claim the warranty, you must return the product to the retailer from which it was purchased or if that retailer is part of a National network, a store within that chain, along with satisfactory proof of purchase. The retailer will then return the goods to Directed Electronics.

Directed Electronics will repair, replace or refurbish the product at its discretion. The retailer will contact you when the product is ready for collection. All costs involved in claiming this warranty, including the cost of the retailer sending the product to Directed Electronics, will be borne by you.

Ph: +61 03 8331 4800 | Email: info@kapturecam.com.au

15.1 INDEMNITY

You agree to defend, indemnify and hold harmless Kapture and its subsidiaries and affiliates from and against any and all claims, proceedings, injuries, liabilities, losses, costs and expenses (including reasonable legal fees), including but not limited to, claims alleging negligence, invasion of privacy, copyright infringement and/or trademark infringement against Kapture and its subsidiaries and affiliates, relating to or arising out of your breach of any provision of these terms, your misuse of Kapture products or its services, or your unauthorised modification or alteration of products or software.

15.2 WARRANTY AND WARRANTY DISCLAIMER

Kapture has a limited warranty, whereby Kapture warrants to you and only to you that this Kapture product will be free from defects in materials and workmanship for one (1) year from the date of your purchase (unless a longer warranty period is required by law). The specifics of this Kapture limited warranty are covered in this manual. In addition to the standard one (1) year warranty offered, an additional one (1) year warranty, under the same Terms & Conditions prescribed, is available if your product is successfully registered on the official Kapture website (<https://www.kapturecam.com.au/2-year-warranty/>).

To the extent possible under governing law, other than the above product warranty for the Kapture product you understand and agree that the Kapture products and services are provided on an "as is" and "as available" basis. Kapture makes no warranty that the Kapture products and services will meet your requirements or that use of the Kapture products and services will be uninterrupted, timely, secure or error-free.

Nor does Kapture make any warranty as to the accuracy or reliability of any information obtained through Kapture (including third party content), that any defects in the Kapture products or services be corrected or that the Kapture products or Kapture services will be compatible with any other specific hardware or service. Further, Kapture does not warrant that Kapture products or services or Kapture servers that provide you with data and content are free of viruses or other harmful components. Kapture also assumes no responsibility for and shall not be liable, for any damages caused by viruses that may infect your Kapture product or software. In the event of any loss, damage or injury, you will not look to Kapture to compensate you or anyone else. You release and waive for yourself and your insurer all subrogation and other rights to recover against Kapture arising as a result of the payment of any claim for loss, damage or injury. Kapture equipment and services do not cause and cannot eliminate occurrences of certain events and Kapture makes no guarantee or warranty, including any implied warranty of merchantability or fitness for a particular purpose or that Kapture equipment and services provided will detect or avert such incidents or their consequences. Kapture does not undertake any risk that you or property, or the person or property of others, may be subject to injury or loss if such an event occurs. The allocation of such risk remains with you, not Kapture. Other than the above product warranty for Kapture products, its suppliers disclaim all warranties of any kind, whether express, implied, or statutory, regarding the Kapture products and services, including any implied warranty of title, merchantability, fitness for a particular purpose, or non-infringement of third-party rights. Because some jurisdictions do not permit the exclusion of implied warranties, the last sentence of this section may not apply to you.

Kapture hereby further expressly disclaims all liability for any claims for service failures that are due to normal product wear, product misuse, abuse, product modification improper product selection or your noncompliance with all applicable federal, state or local laws. This warranty and warranty disclaimer give you specific legal rights, and you may have other rights that vary by state, province, or country. Other than as permitted by law, Kapture does not exclude, limit or suspend other rights you have, including those that may arise from the nonconformity of a sales contract. For a full understanding of your rights, you should consult the laws of your state, province, or country.

15.3 LIMITATIONS OF KAPTURE LIABILITY

Under no circumstances will Kapture be liable in any way for any content, including, but not limited to, the loss of content, any errors or omissions in any content, or any loss or damage of any kind incurred in connection with use of or exposure to any content posted, emailed, accessed, transmitted, or otherwise made available via Kapture. Kapture liability for damages, especially for breach of duty or obligation, delay in performance, non-performance, or malperformance shall be precluded, except when these are due to negligent breaches of any significant contractual duty or obligation on the part of Kapture. Any liability for negligence is limited to direct losses usually and typically foreseeable in such case. Should the claim for damages be based on wilful or grossly negligent breach of contractual duty or obligation on the part of Kapture, the preclusion and limitation of liability mentioned in the preceding sentences will not Apply. The preceding preclusion and limitation of liability will also not Apply to claims for damages arising out of loss of life, bodily injury or health impacts for which Kapture may be liable, or for non-contractual liability.

Some states and countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not Apply to you. Additionally, this provision is not intended to limit Kapture's liability in the event of Kapture's wilful or intentional misconduct.



YOUR EYEWITNESS ON THE ROAD™



kapture

ANOTHER
DIRECTED
BRAND

All Images, Information and Content are Copyright © 2023
Directed Electronics Australia Pty Ltd. All Rights Reserved.

www.kapturecam.com.au | www.kapturecam.co.nz

DIRECTED
AUSTRALIA & NZ

www.directed.com.au
www.directed.co.nz